ROCKSOLID® ANCHOR OWNER MAINTENANCE INSTRUCTIONS

(not for initial installation)


Product Removal

When removing a basketball game or other product from a RockSolid Anchor it is important to follow these instructions to avoid disassembling the wedge anchor assembly.


- 1. Loosen bolt using a 1/4" Allen wrench, turning in a counter-clockwise direction two-full turns, as seen from looking down.
- 2. Lift straight-up, remove the product and re-tighten the bolt with the Allen wrench turning in a clockwise direction two-full turns. Be careful not to over tighten.

2 Reassembly of Wedge into Anchor

Remove the wedge components from the inside of the anchor. There are two complete pieces; the middle wedge brass (®), and the top/bottom single post brass (®). Place the middle wedge in-between the posts as shown below.

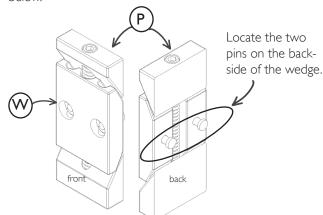


3 The pins align into the two slots on the back inside wall of the anchor.

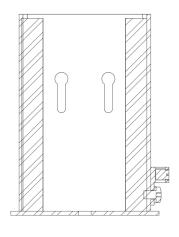

4 Position the wedge over the top of the anchor top up.

NOTE: The top of the wedge has the socket for the Allen wrench.

While depressing the spring buttons on the front side of the wedge, align the pins to the slots on the inside of the anchor and slide into the slot openings, using a downward motion move the wedge into the locked position at the bottom of the slot.

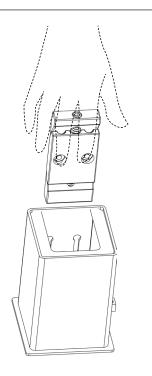

(5) If the product is not being reinserted into the anchor, once the wedge is in place tighten it using the Allen wrench. Insert the wrench into the anchor bolt and turn clockwise one turn to gently tighten the wedge into place. NOTE: Do not over-tighten.

If the product is being reinserted into the anchor, place product into anchor making sure that the products frame rests completely on the bottom of the anchor with the forward edge facing the pool.

Tighten using the Allen wrench in the clockwise direction until anchor wedge contacts the frame and no forward or backward motion can be felt. When tightening anchor wedge, never exceed 8-ft lbs. of torque. Anchor bolt should be snug, but never over tighten.

Make sure that the opening size directly adjacent to anchor bolt is between 2-9/16" (65mm) and 2-5/8" (66.7mm) wide.

NOTE: The opening size should never exceed 2-5/8" (66.7mm) or the anchor will disassemble.

BUILDER/INSTALLER: Please give these instructions to the Facilities Manager for future reference.